

Bicknell's Vermont House

Main House Fireplace Operating Instructions

To operate the fireplace, use the remote controller located on top of the fireplace mantel. The on/off functions on the remote are accessed by pushing the mode button successively. When you do that the choice in succession are “on” (which means the fireplace is turned on and operational), “off” (which means the fireplace is off), and “off, thermo” (which is a setting we do not use). You only need to press the “mode” button until it shows “on” on the screen. To turn the fireplace off, press the mode button a couple of times until “off” appears on the screen.

The remote will show a battery icon in the upper left hand corner of the screen if the batteries need to be replaced - the battery icon will show little or no power left in the batteries. Fresh batteries are located in the top drawer of the cabinet next to the double doors on the east side of the living room.

The remote control will only work if the slider button on the receiver box underneath the fireplace is in the middle (“remote”) position. The fireplace can be operated without the remote from the receiver box by pushing the slider button toward the “learn” button. To turn the fireplace off, that slider switch needs to be pushed all the way in the opposite direction, which is the off position. So that slider button has three position - on, remote and off.

When you arrive the slider button on the receiver box should be in the middle (remote) position. That way all you need to do to operate the fireplace is to push the “mode” button on the remote between the on and off positions.

If needed, detailed instructions for using the fireplace remote are located on the right hand side of the drawer of the cabinet in the main house living room next to the double doors on the east side of the room, the same drawer where batteries are located.